

solar lantern

LED-IPL-SL

Green LED shows charging.

If green LED is not glowing do following then:

- a. On the switch

DC socket – plug in the DC socket from solar module to this socket when we plug in socket light automatically switch off and green LED start glowing if Green LED is not glowing on the switch.

Red LED shows battery low whenever battery lows it start glow so batter to switch off.

Fuse – this fuse given for protection.

(See Image 3)

NOTES FOR CHARGING:

1. Always ON the switch.
2. Always plug in the cable.
(See Image 2)
3. Green LED always glowing.
4. Load automatically start switch off.

NOTES TO SWITCH ON THE LIGHT

1. Light automatically start glowing in evening.
2. If you don't want light, switch off the light.
3. If red LED glowing, switch off the light.



Image 2

Image 3

instapowerTM
The Future of LED Lighting!

Instapower Ltd.
Plot No. - 457
Phase - V, Udyog Vihar,
Gurgaon - 122001 (INDIA)
Telephone: +91-124-4108560
Telefax: +91-124-4108562

visit us at <http://www.instapower.com>